


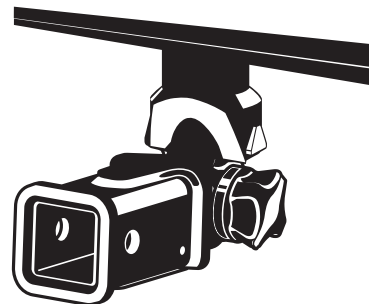

Part Number: 200774

Mercedes GLC (SUV)

06/2015 -



Not Visible



motion sensor
trunk release


☒ Facelift 07/2019 -

☒ Hybrid

☒ AMG Line

☒ AMG

☒ GLC Coupé

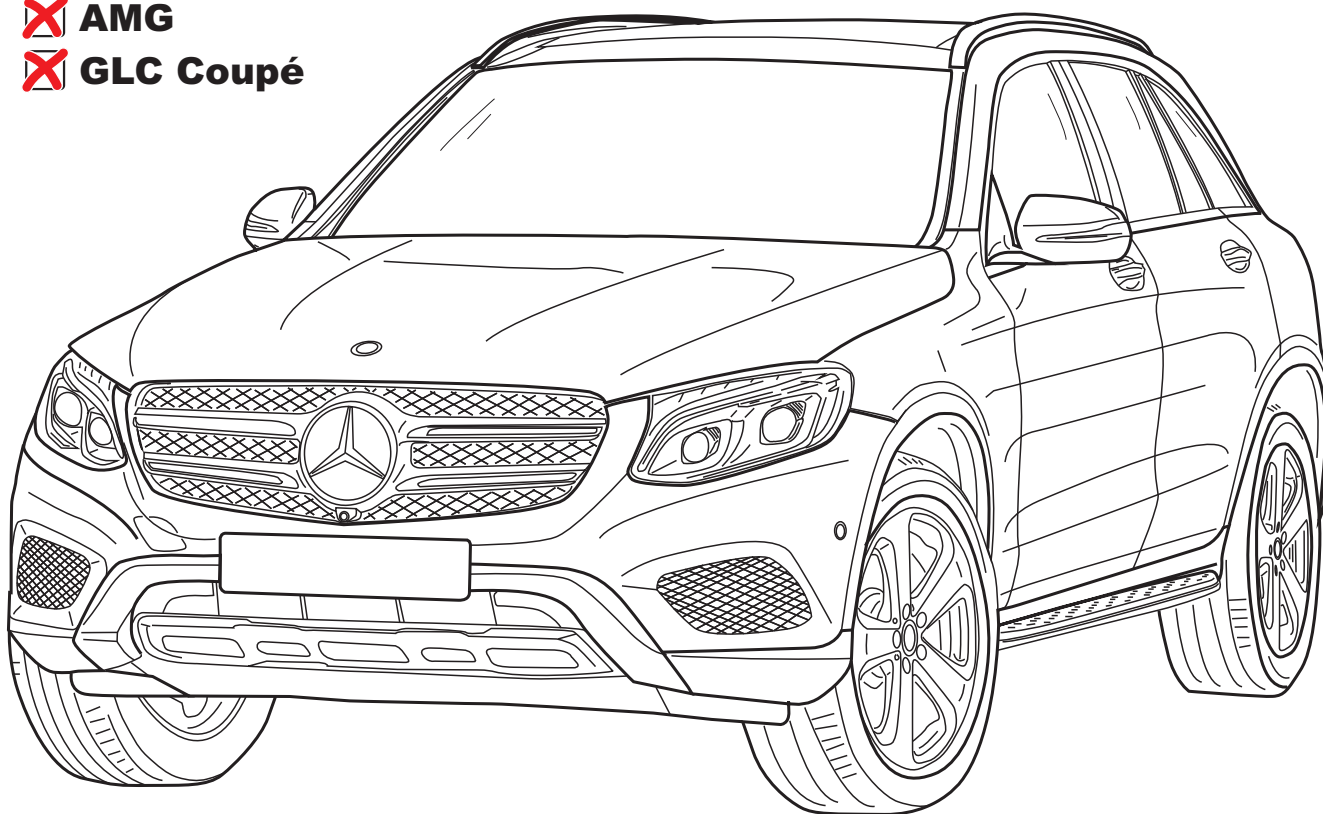



Check our webpage for the latest and a full-color copy of this fitting instruction.

www.oris-automotive.com/en/

Version: 02
Date: 15-05-2024



THESE INSTRUCTIONS MUST BE GIVEN TO THE END USER

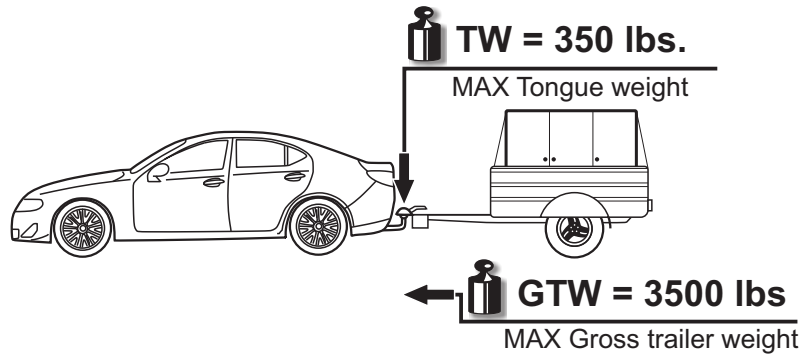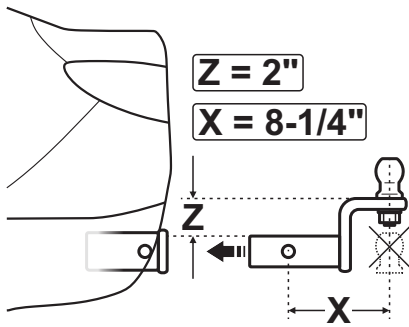

Never exceed the vehicle or the hitch manufacturer's recommended towing capacity and tongue weight.



IMPORTANT SAFETY NOTICE FOR HITCH INSTALLERS AND CUSTOMERS

Read all installation, operating and safety instructions along with all labels before installing or using this product. Failure to comply with the safety information could result in serious injury or death.



www.oris-automotive.com/en/safety/



WARNING: This product can expose you to chemicals including carbon black, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov



WARNING: Do not perform any installation or towing procedures without fully understanding the correct tools and actions for all steps. Call for support if needed.



www.oris-automotive.com/en/acps-automotive-aftermarket-worldwide/

Legend / Légende / Leyenda



US Attention
F Attention
E Atención



US Incorrect
F Incorrect
E Incorrecto



US Correct
F Correct
E Correcto




US Inspect
F Examiner
E Revise



US In both sides
F Tous les deux côtés
E En ambos lados



US Manually
F À la main
E A mano



US Only 2 persons may carry out
F Toujours s'y mettre de deux
E Operación que requiere dos personas



US Remove
F Rebuter
E Tratamiento de residuos



US Location/Position
Arrow
F Flèche de Position
E Flecha de posición



US Movement Arrow
F Flèche de mouvement
E Flecha de movimiento




US Protect it against corrosion
F Protéger contre la corrosion
E Proteger contra la corrosión




US Electrical connection
F Connexion électrique
E Conexión eléctrica

Tools Required / Outils requis / Herramientas requeridas

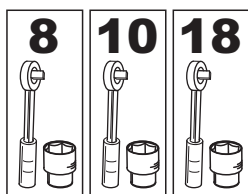


RATCHET
WITH
SOCKET




TORX



CUTTING
TOOL



TORQUE WRENCH
WITH SOCKET 10, 13, 17, 19



PLASTIC
PRY

Safety / Sécurité / Seguridad

Should be worn at all times
while installing this product.


Il doit être porté en permanence
lors de l'installation de ce produit.

Debe llevarse en todo momento
mientras se instala este producto.




Assembly / Assemblage / Montage

Mounting time

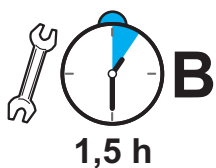


Spare Parts



290019









290029











290039



















290089


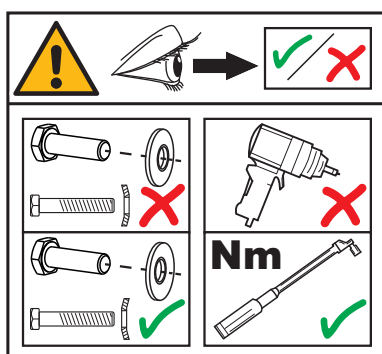



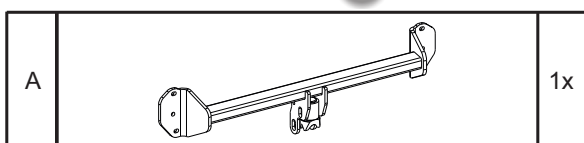
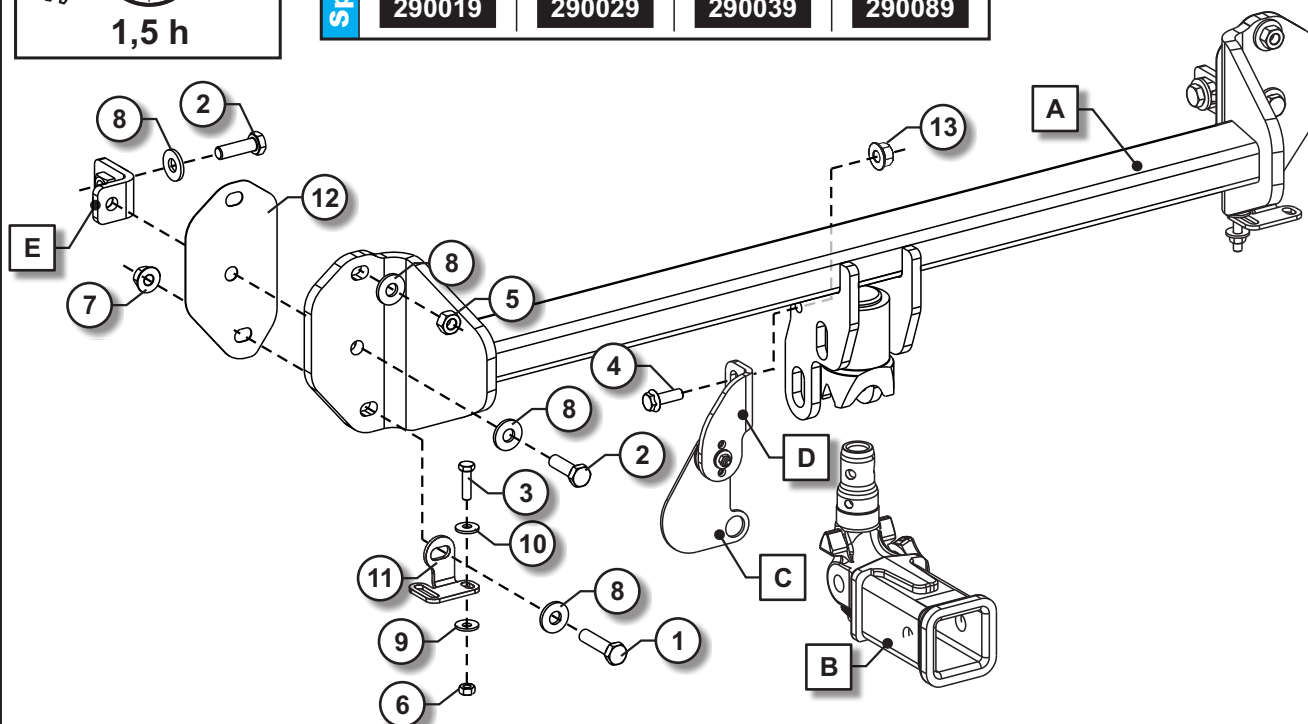










1		M12x50	DIN933	10.9	2x	117 Nm 86.3 ft-lbs
		M12x40	DIN933	10.9	4x	117 Nm 86.3 ft-lbs
2		M8x40	DIN933	10.9	2x	34 Nm 25.1 ft-lbs
3		M10x30	DIN6921	10.9	1x	68 Nm 50.2 ft-lbs
		M12x1,5	DIN934	10	2x	117 Nm 86.3 ft-lbs
4		M8	DIN934	10	2x	34 Nm 25.1 ft-lbs
5		M12	DIN6923	10	2x	117 Nm 86.3 ft-lbs
6		13x30x3,2	NFE25510		8x	
7		8,4x22x2,2	NFE25510		2x	
8		M8	DIN9021		2x	
9					2x	
10					2x	
11					2x	
12					2x	
13		M10	DIN6923	10	1x	68 Nm 50.2 ft-lbs

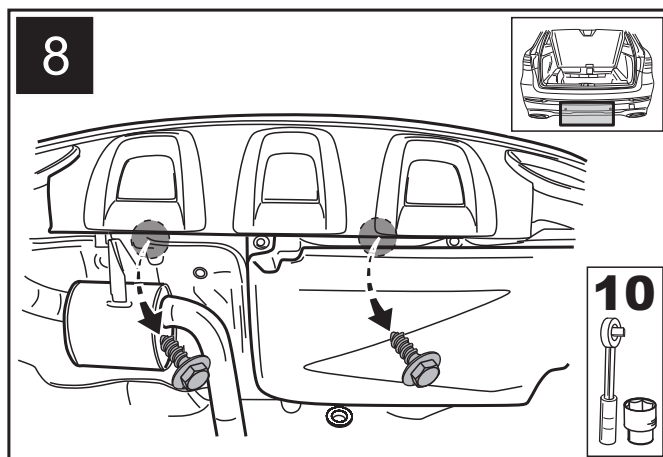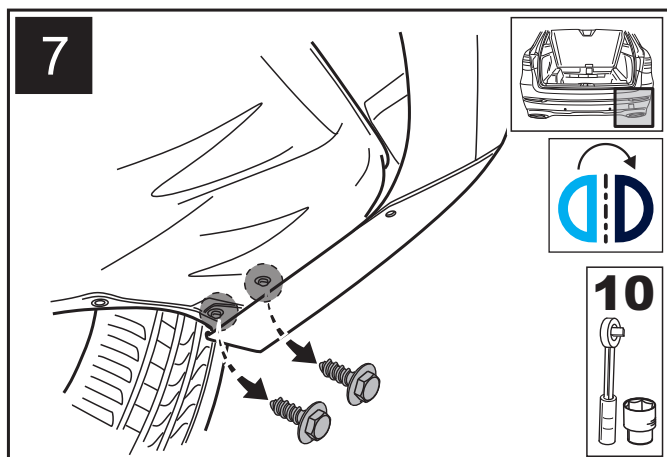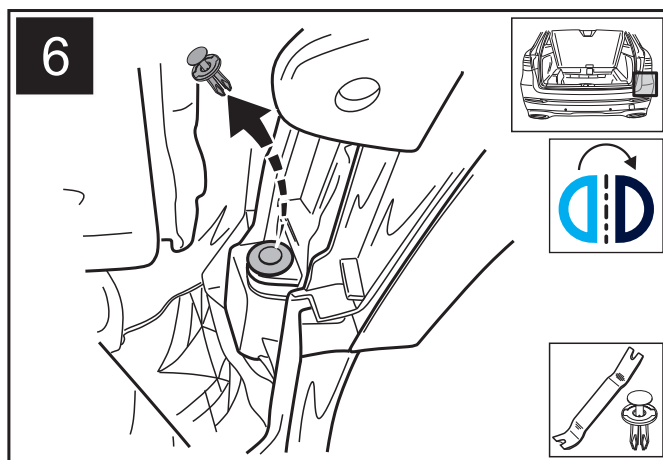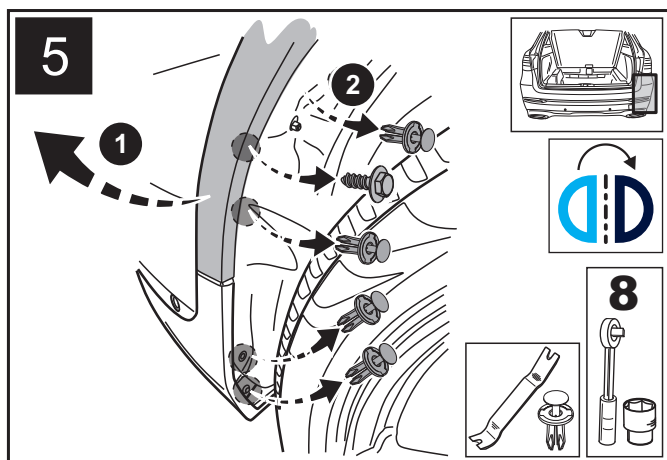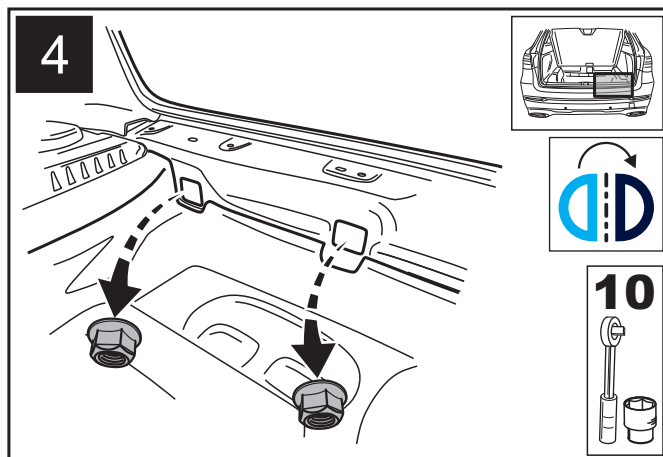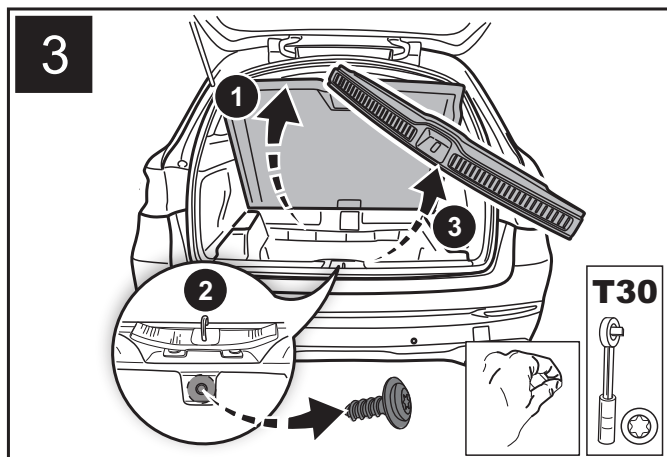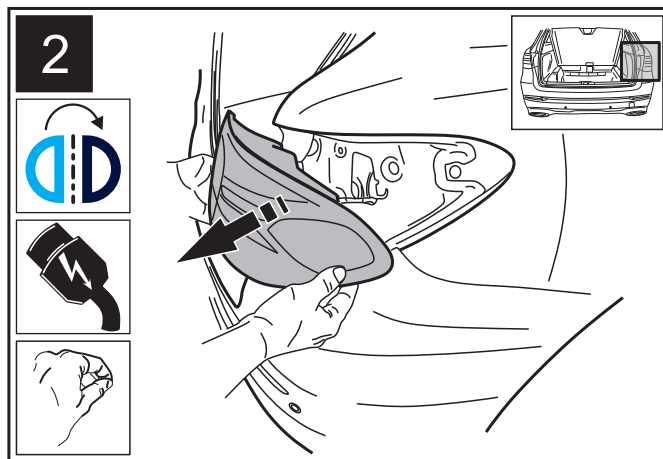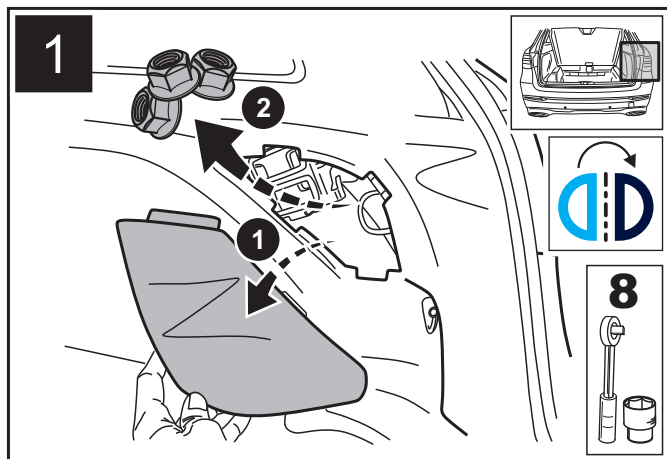


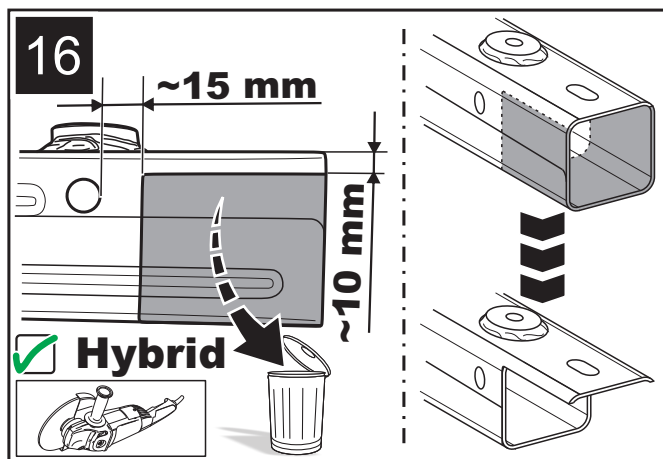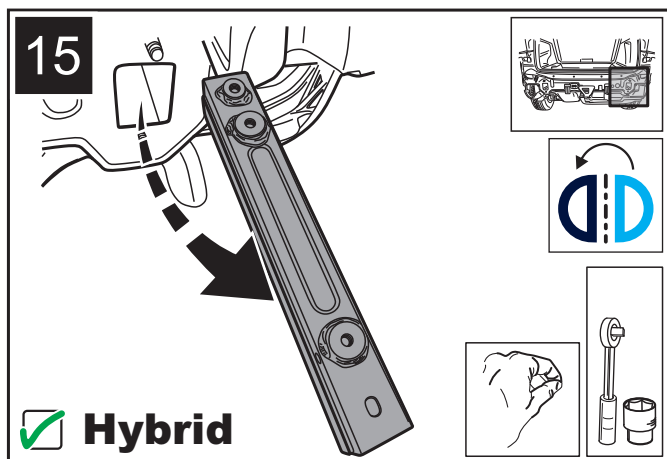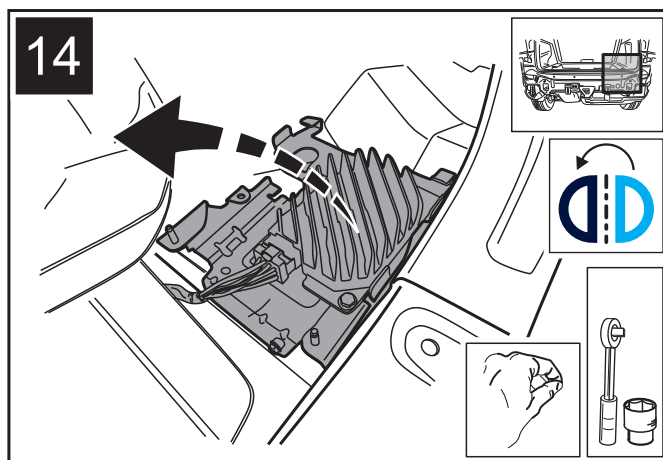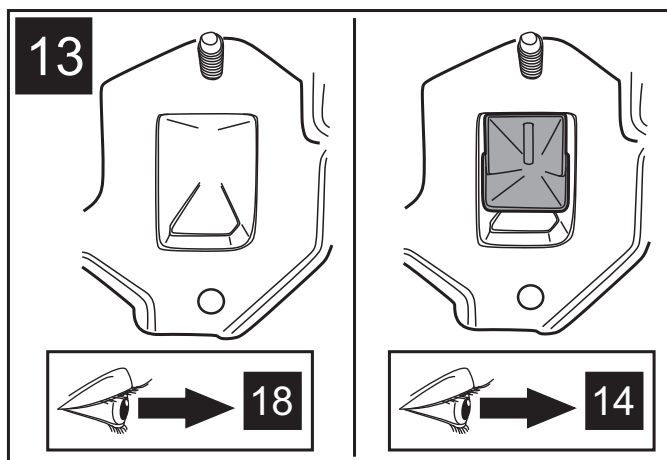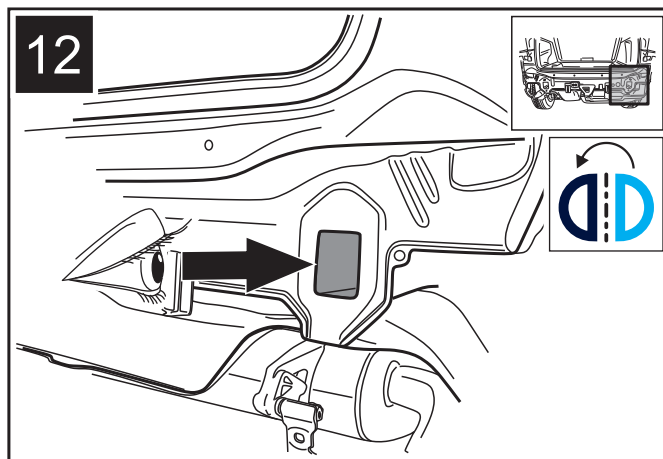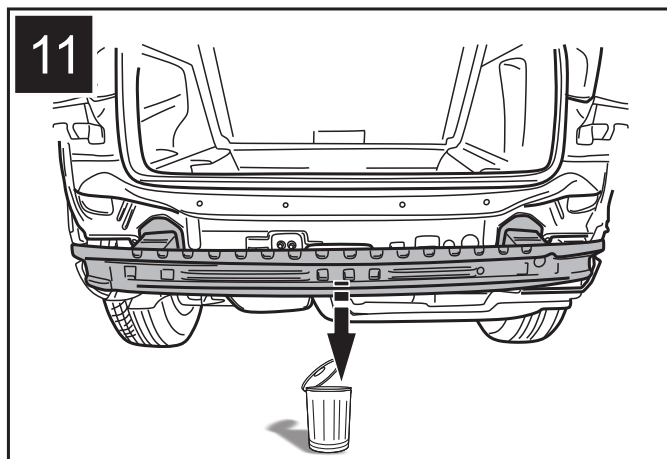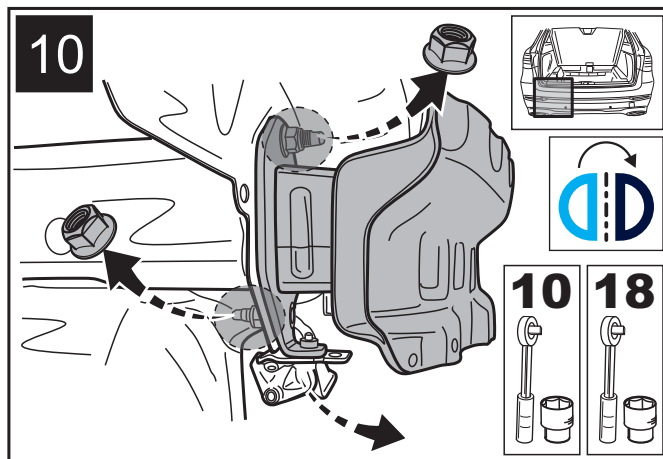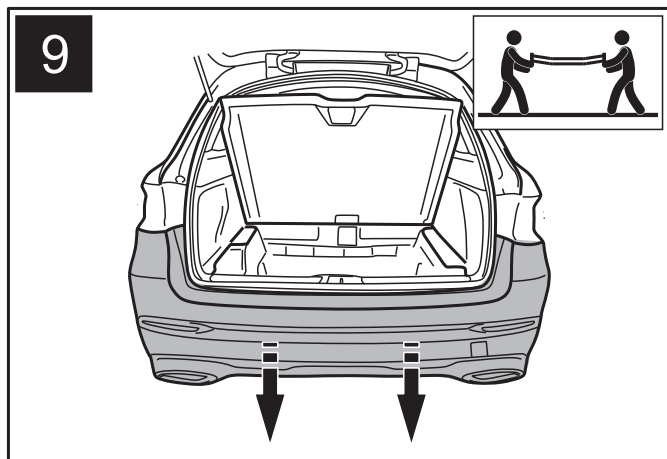

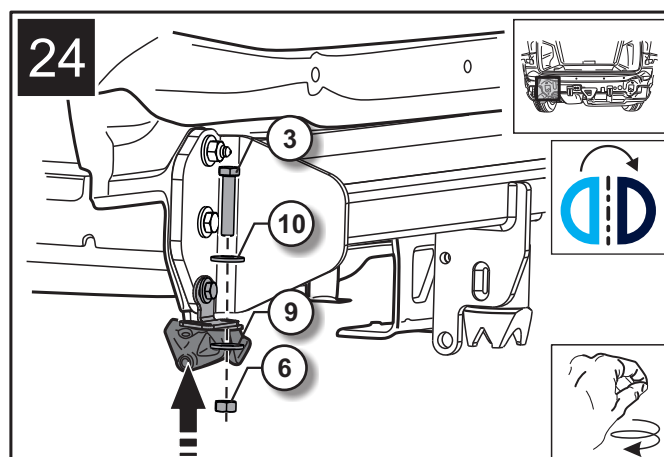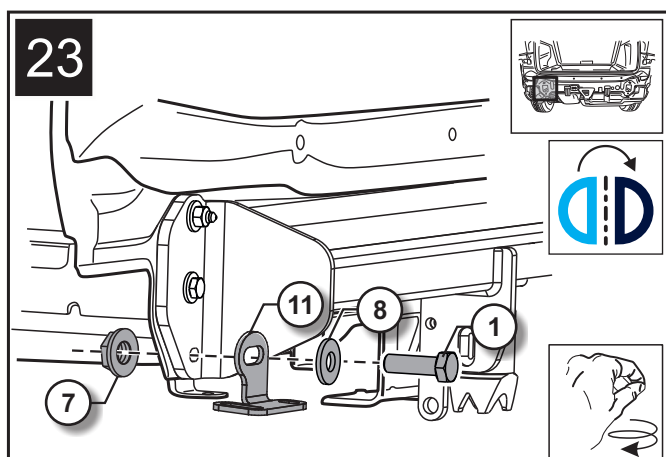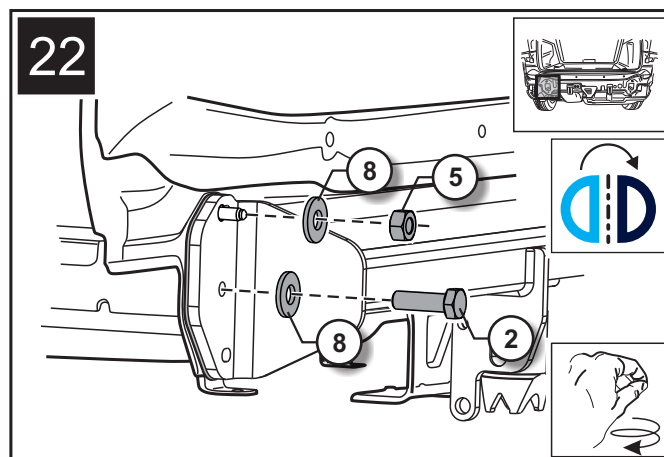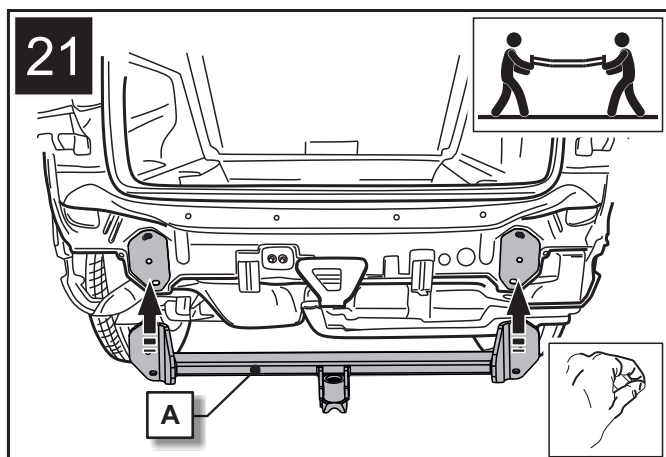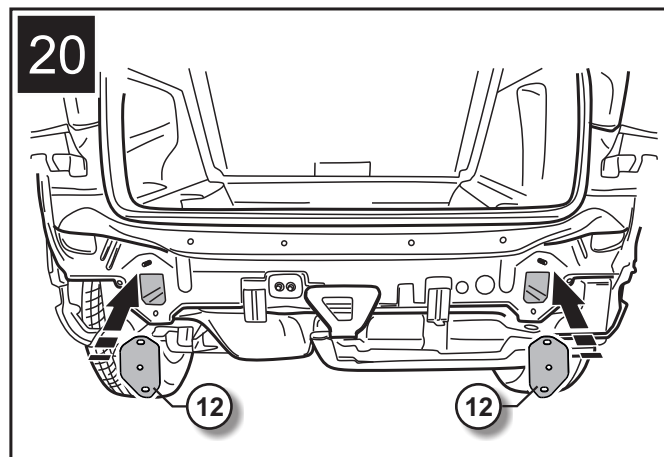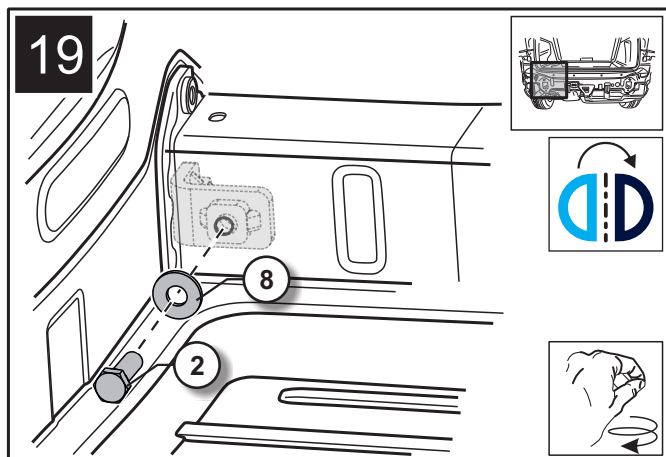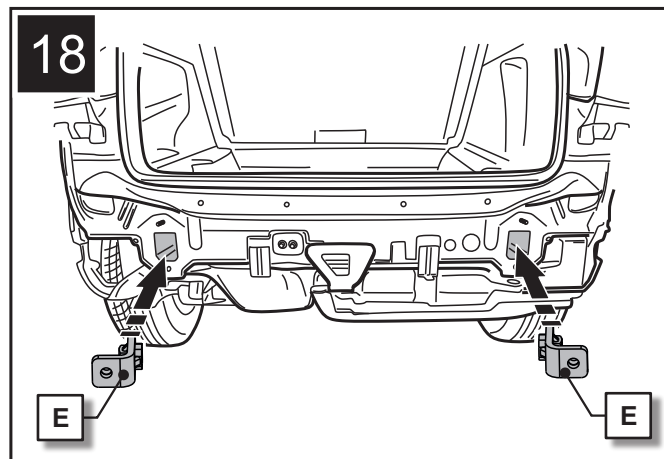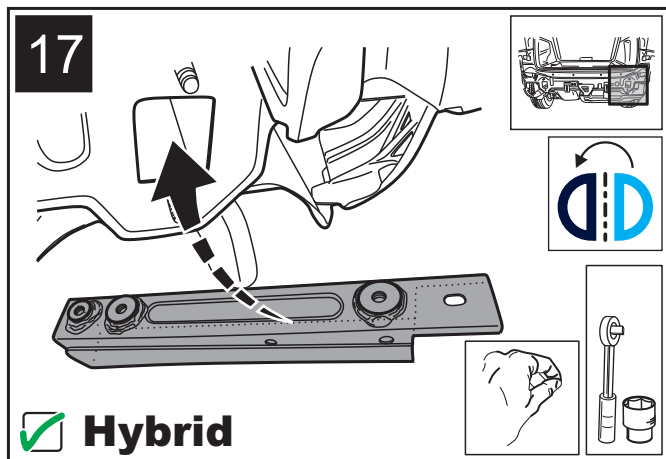

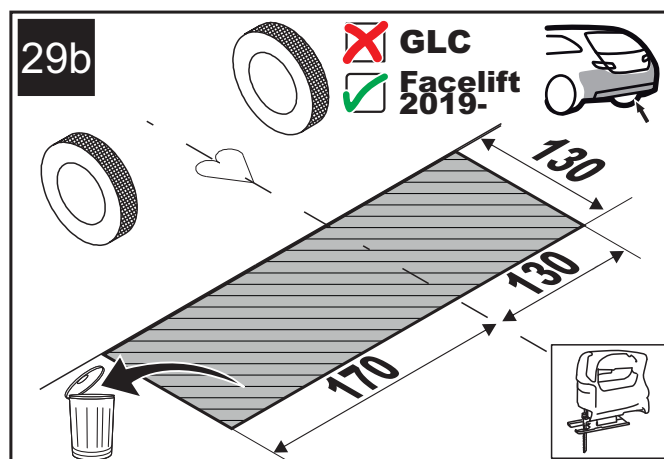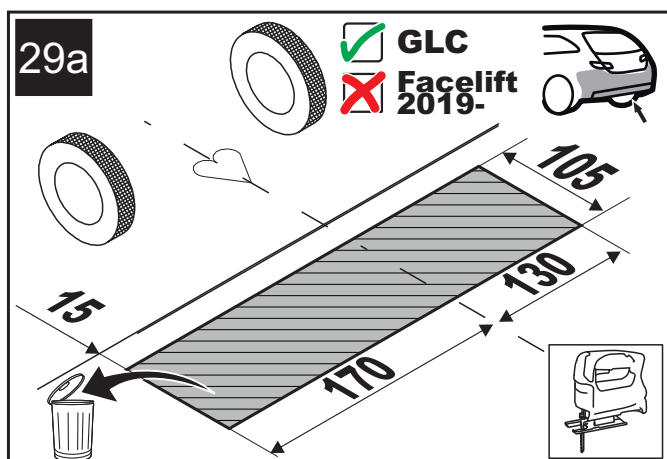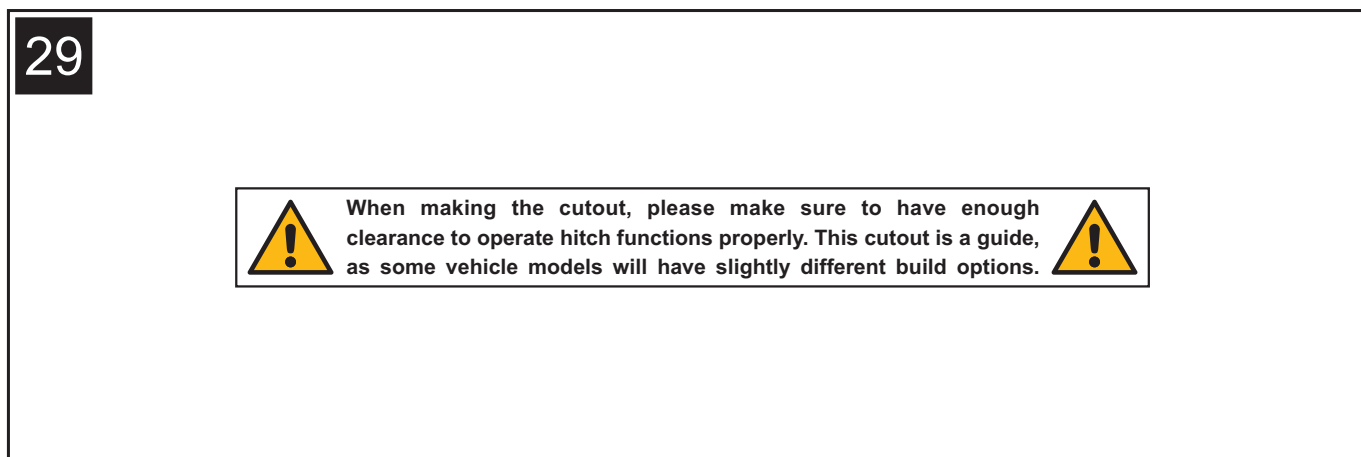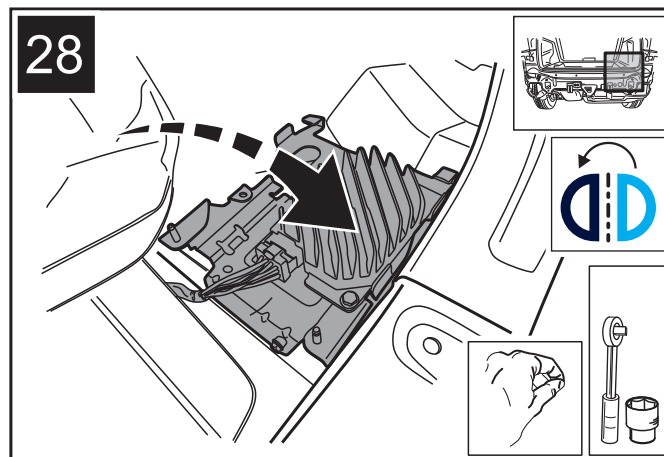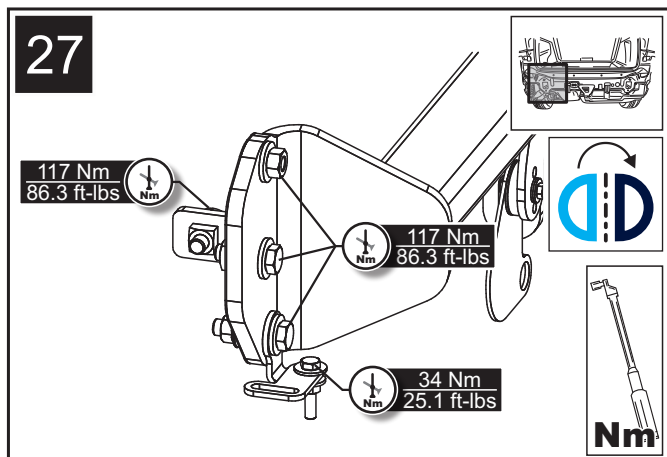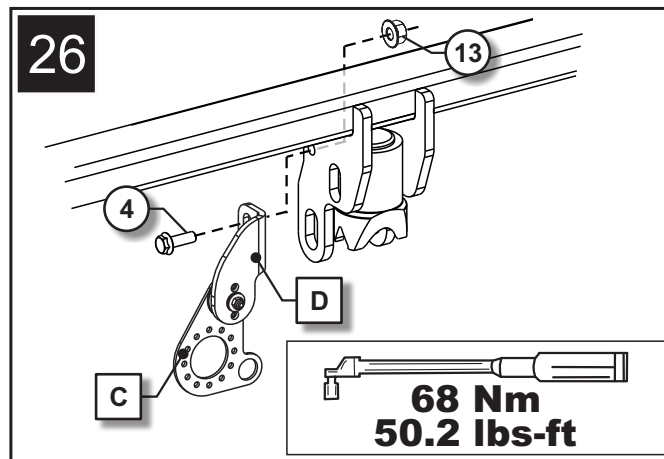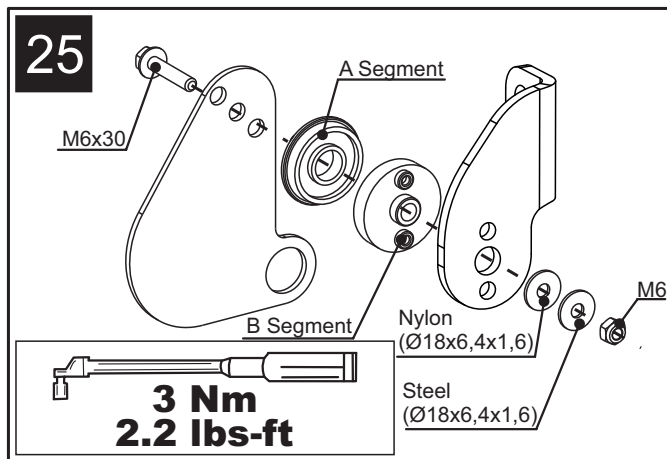

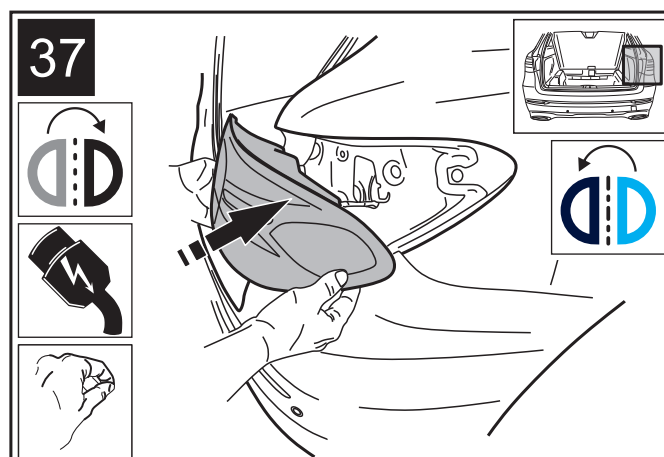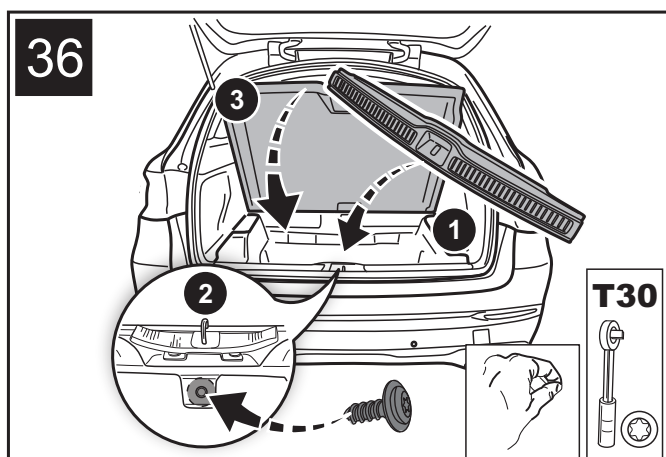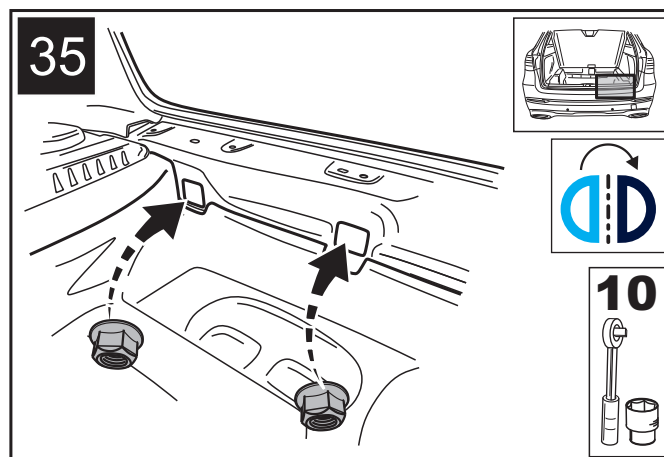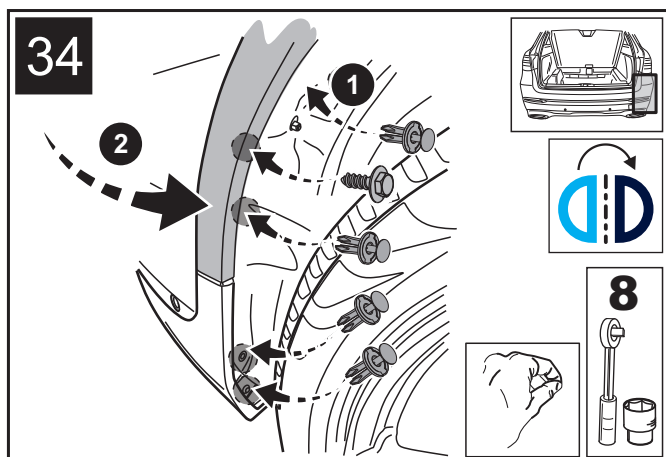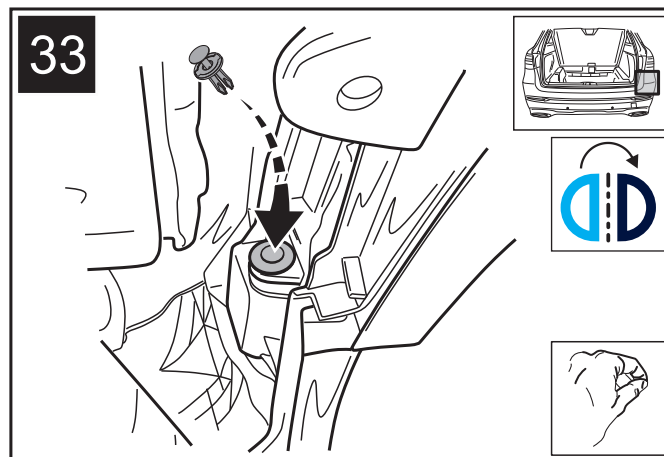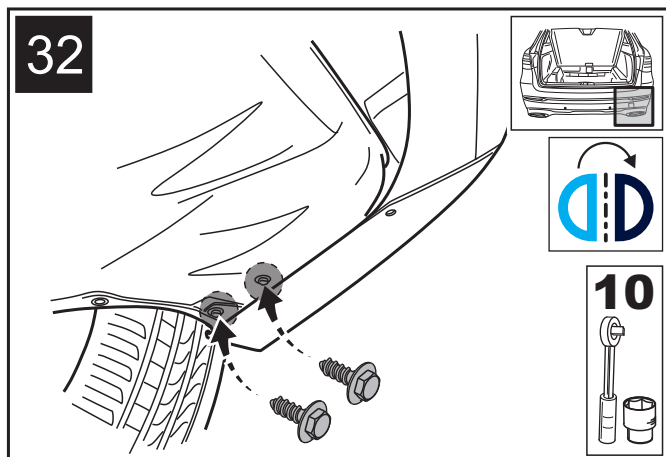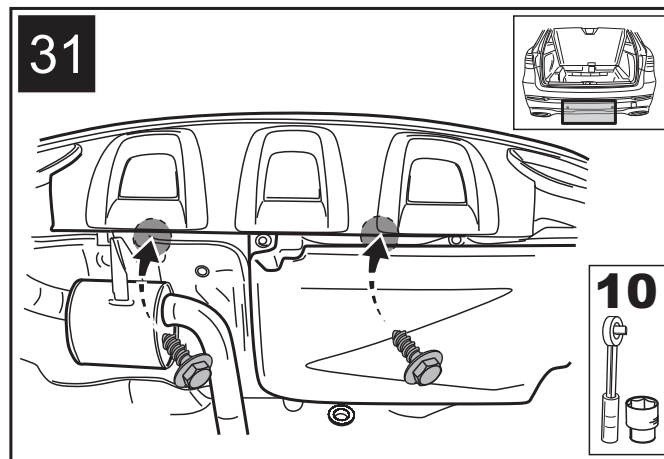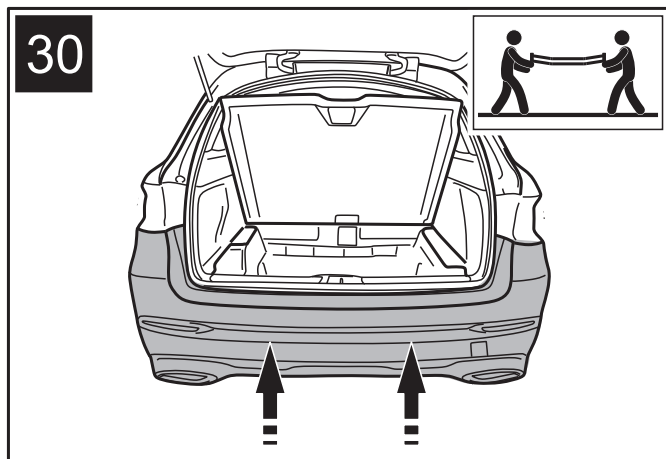

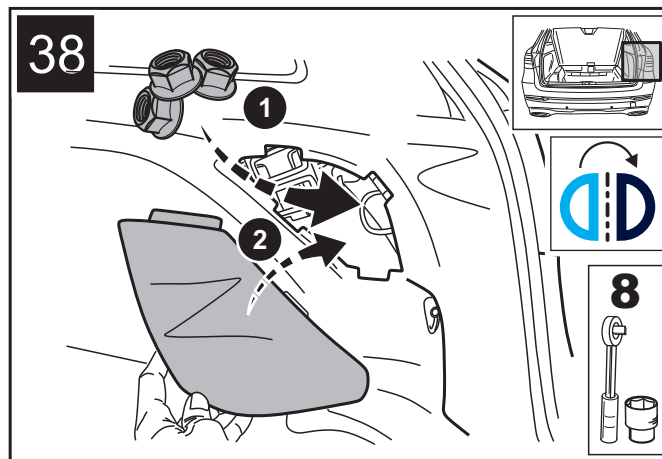

ORIS
ACPS

HELPLINE



www.oris-automotive.com/en/acps-automotive-aftermarket-worldwide

ORIS
ACPS