



Part Number: 200854

Mercedes GLE (V167)

10/2018 -

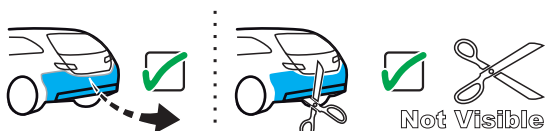

AdBlue

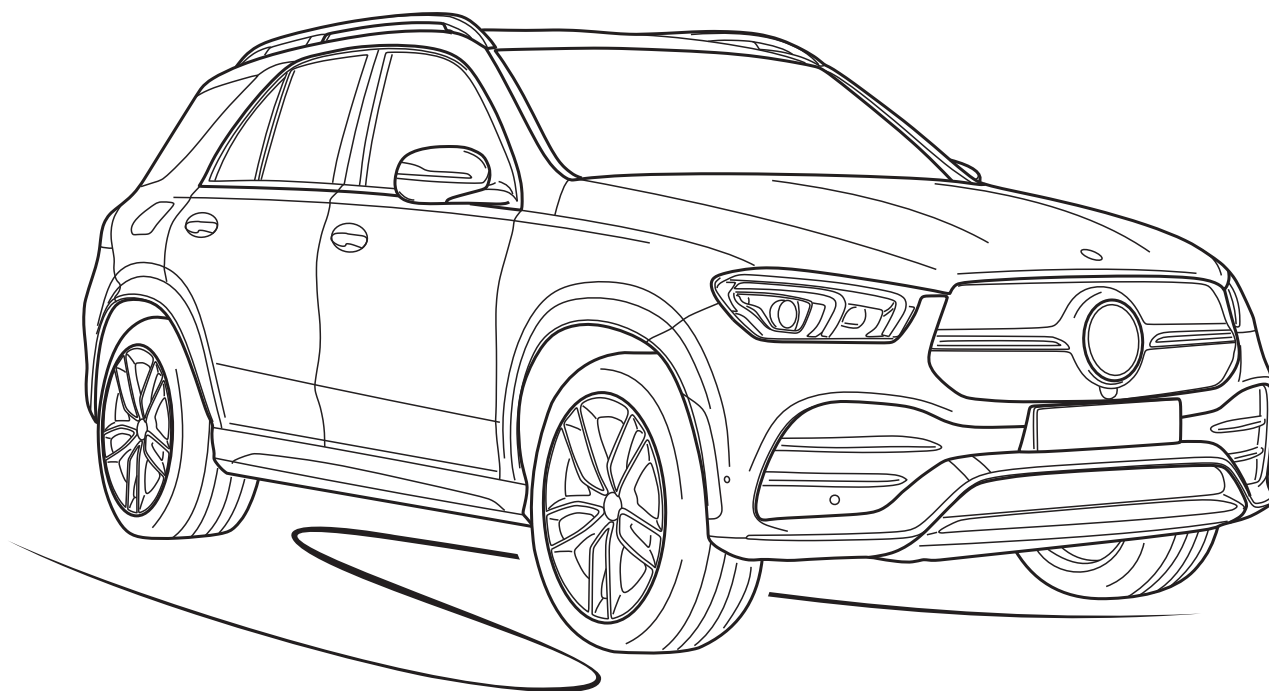


Check our webpage for the latest and a full-color copy of this fitting instruction.

www.oris-automotive.com/en/

Version: 01
Date: 13-06-2024



THESE INSTRUCTIONS MUST BE GIVEN TO THE END USER

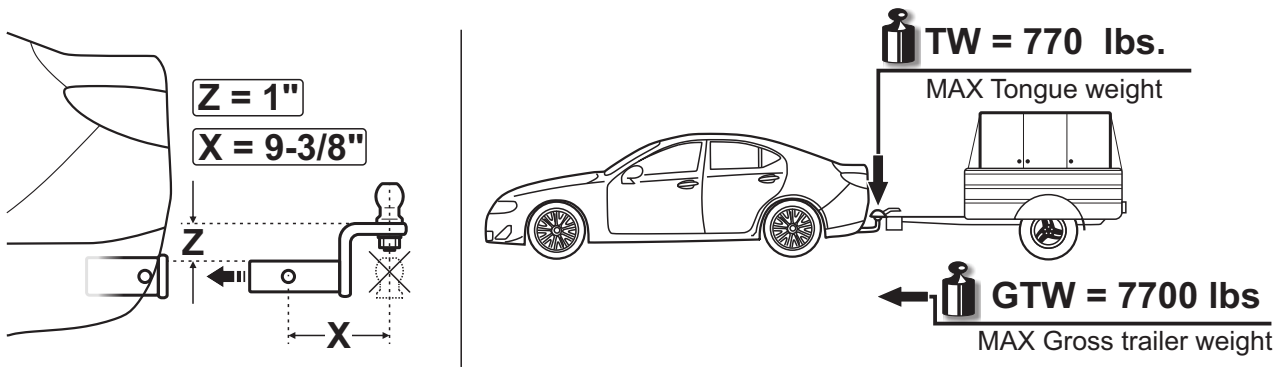

Never exceed the vehicle or the hitch manufacturer's recommended towing capacity and tongue weight.



IMPORTANT SAFETY NOTICE FOR HITCH INSTALLERS AND CUSTOMERS

Read all installation, operating and safety instructions along with all labels before installing or using this product. Failure to comply with the safety information could result in serious injury or death.



www.oris-automotive.com/en/safety/



WARNING: This product can expose you to chemicals including carbon black, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov



WARNING: Do not perform any installation or towing procedures without fully understanding the correct tools and actions for all steps. Call for support if needed.



www.oris-automotive.com/en/acps-automotive-aftermarket-worldwide/

Legend / Légende / Leyenda



US Attention
F Attention
E Atención



US Incorrect
F Incorrect
E Incorrecto



US Correct
F Correct
E Correcto



US Inspect
F Examiner
E Revise



US In both sides
F Tous les deux côtés
E En ambos lados



US Manually
F À la main
E A mano



US Only 2 persons may carry out
F Toujours s'y mettre de deux
E Operación que requiere dos personas



US Remove
F Rebuter
E Tratamiento de residuos



US Location/Position Arrow
F Flèche de Position
E Flecha de posición



US Movement Arrow
F Flèche de mouvement
E Flecha de movimiento




US Protect it against corrosion
F Protéger contre la corrosion
E Proteger contra la corrosión



US Electrical connection
F Connexion électrique
E Conexión eléctrica


Tools Required / Outils requis / Herramientas requeridas

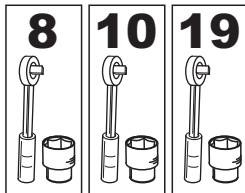


RATCHET WITH SOCKET



CUTTING TOOL



PLASTIC PRY



TORQUE WRENCH WITH SOCKET 10, 17, 19, 22

Safety / Sécurité / Seguridad

Should be worn at all times while installing this product.



Il doit être porté en permanence lors de l'installation de ce produit.

Debe llevarse en todo momento mientras se instala este producto.



Assembly / Assemblage / Montage

Mounting time

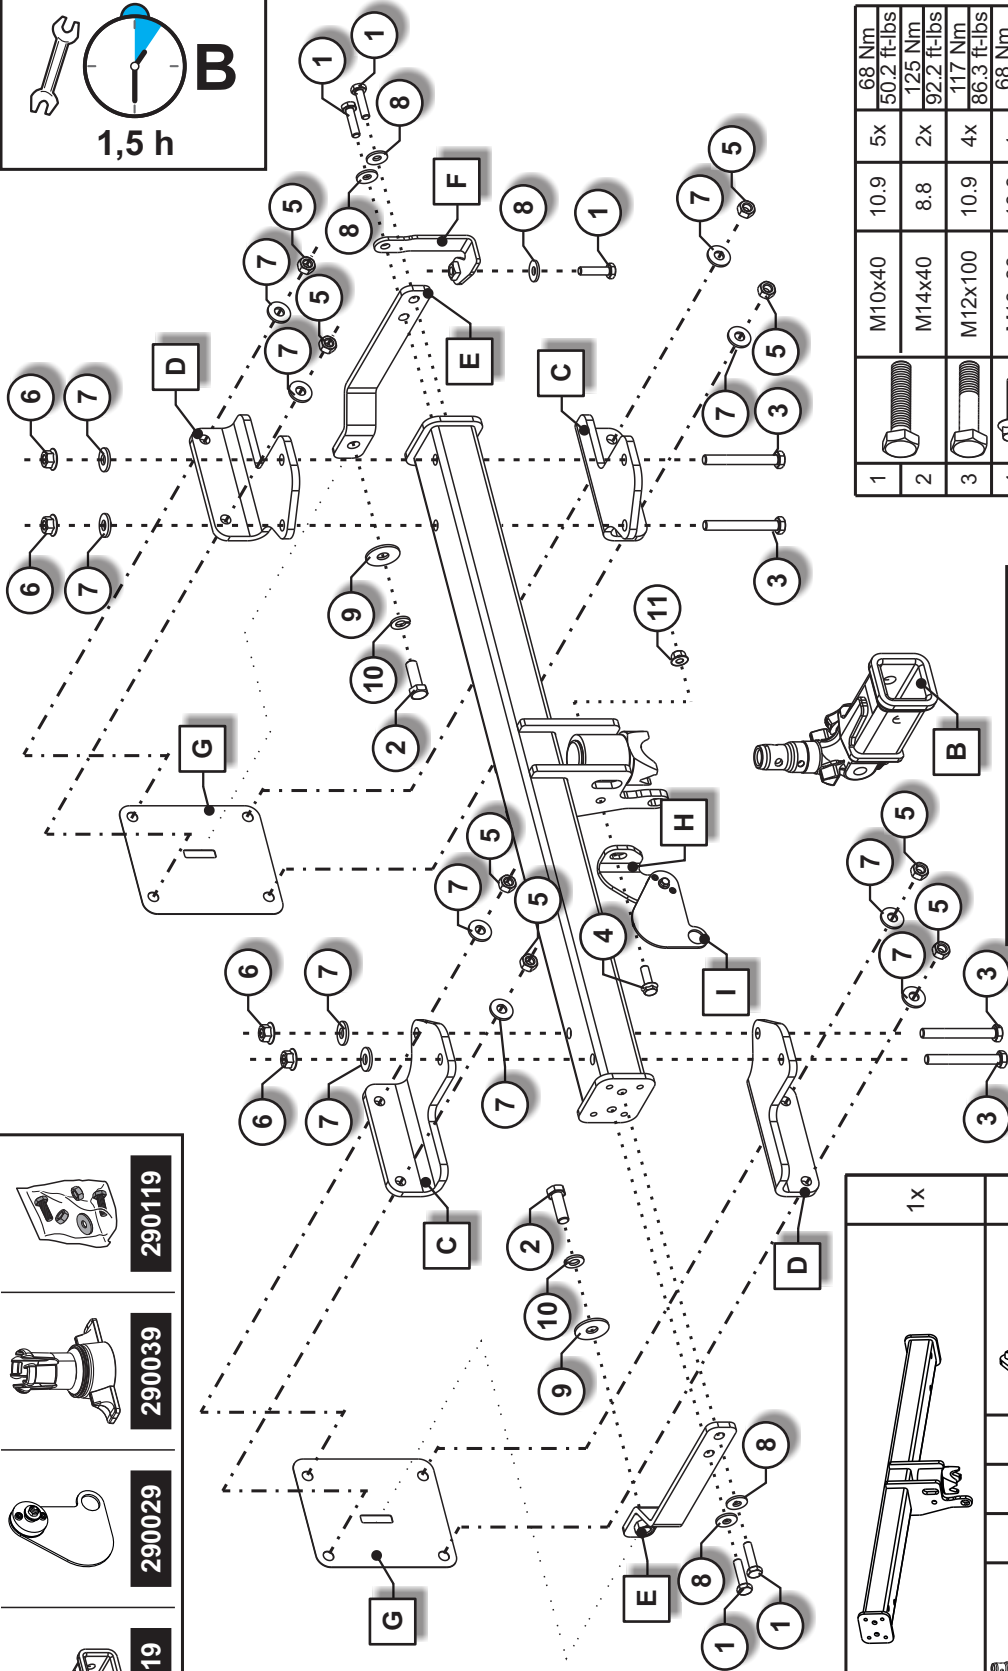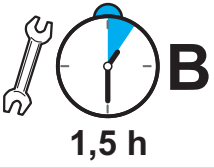

1		M10x40	10.9	5x	68 Nm 50.2 ft-lbs
2		M14x40	8.8	2x	125 Nm 92.2 ft-lbs
3		M12x100	10.9	4x	117 Nm 86.3 ft-lbs
4		M10x30	10.9	1x	68 Nm 50.2 ft-lbs
5		M12	10	8x	117 Nm 86.3 ft-lbs
6		M12	10	4x	117 Nm 86.3 ft-lbs
7		13x30x3,2		12x	
8		10x27x2,8		5x	
9		M14		2x	
10		M14		2x	
11		M10	10	1x	68 Nm 50.2 ft-lbs

X

✓

X








✓








Nm









Spare Parts







	290019
	290039
	290029
	290019






A		1x
B		1x
C		2x
D		1x
E		1x

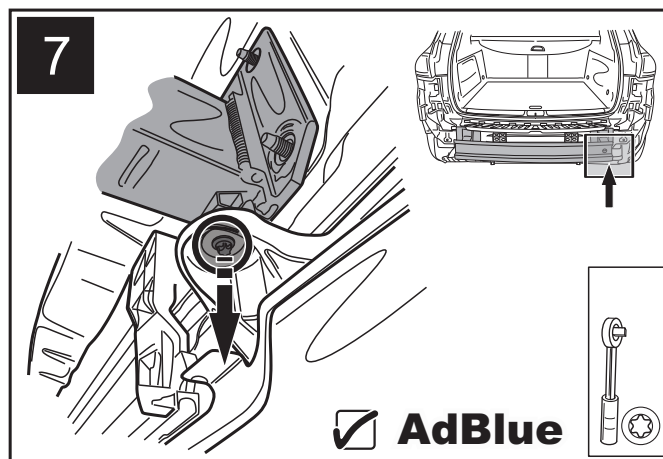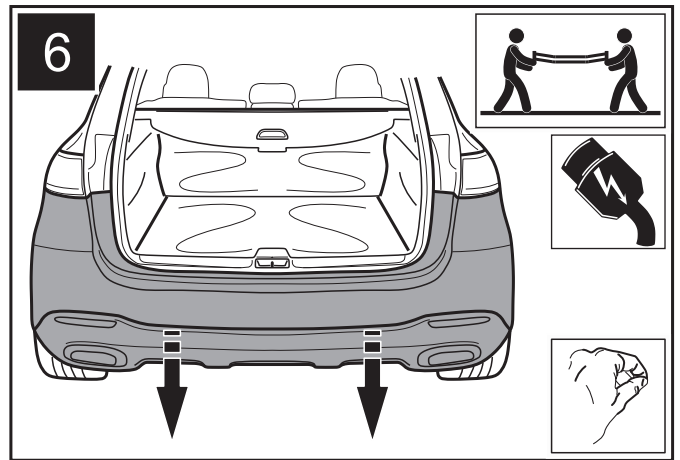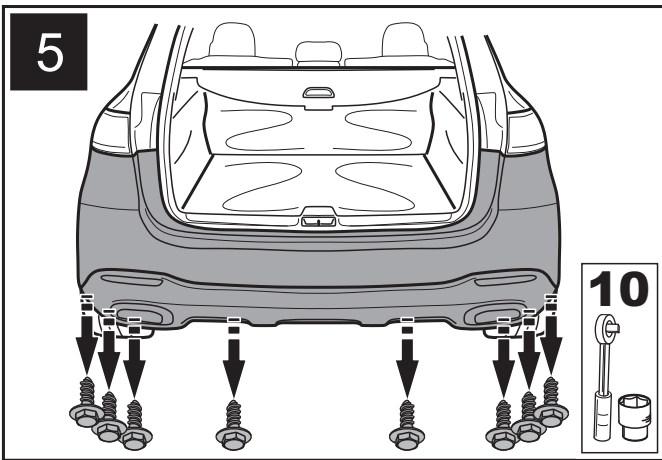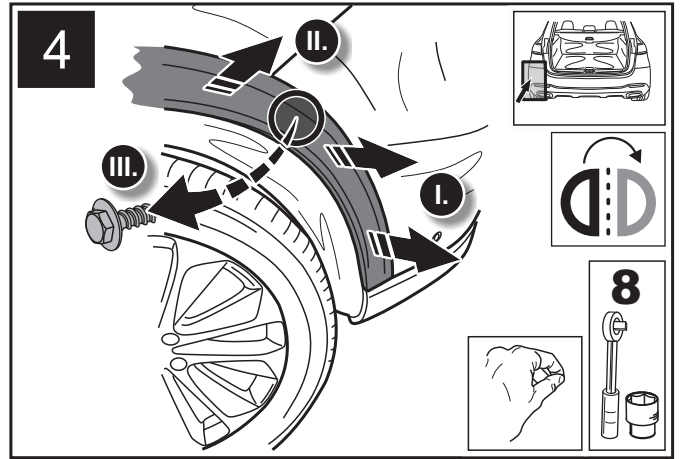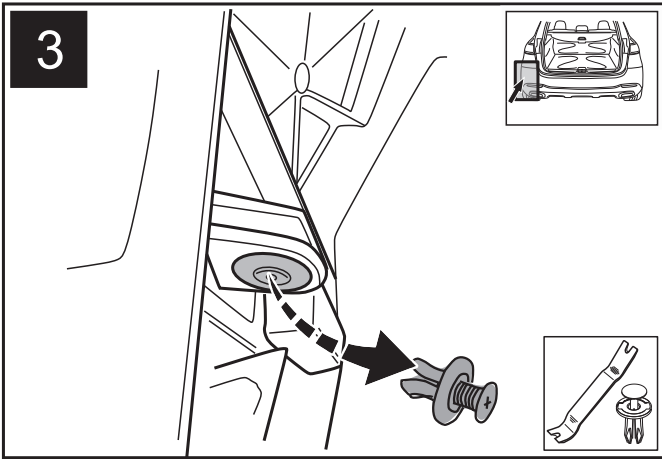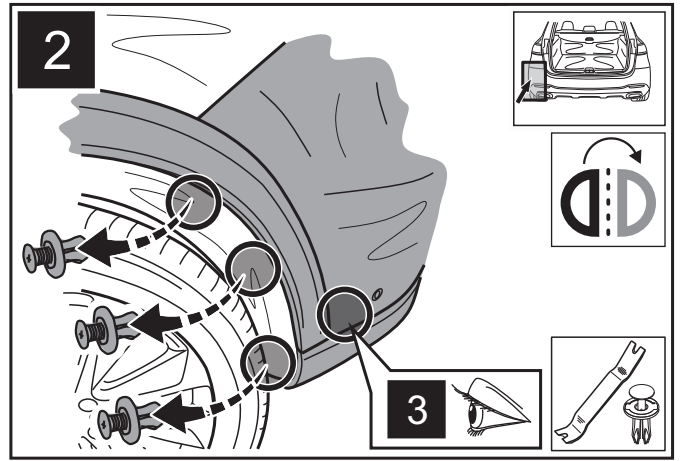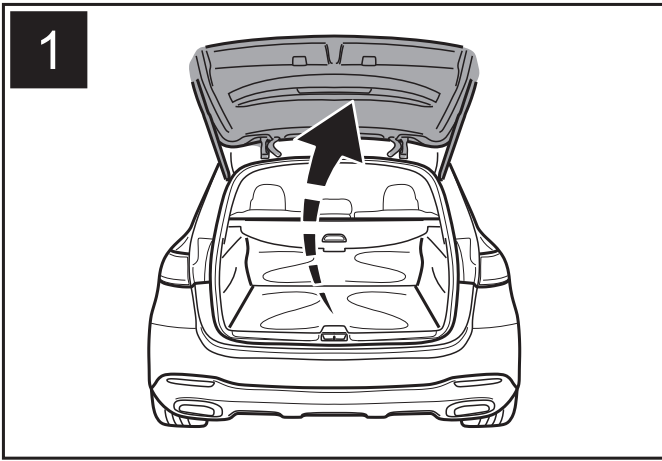

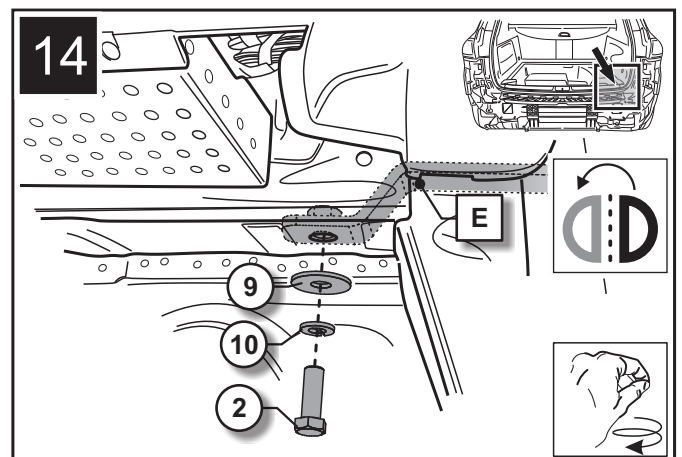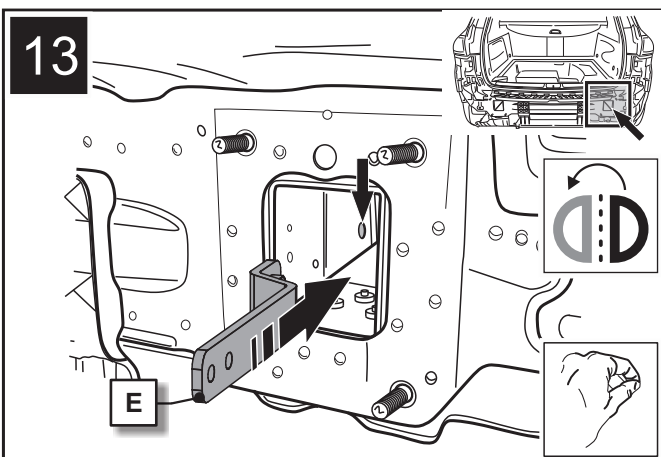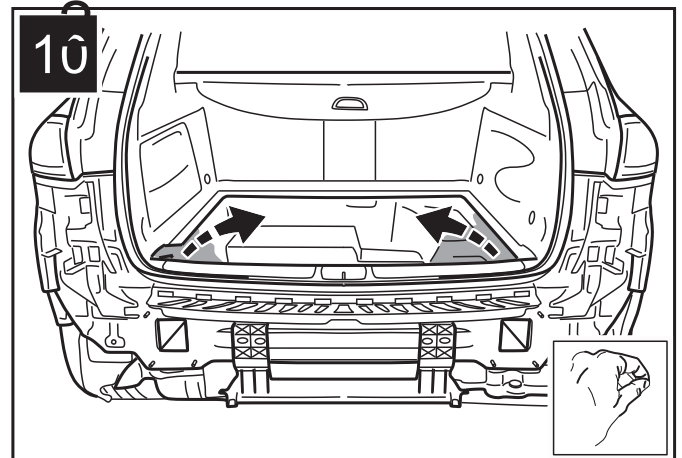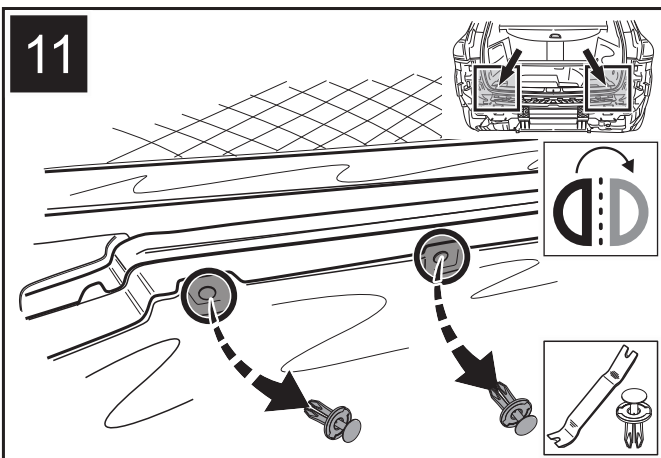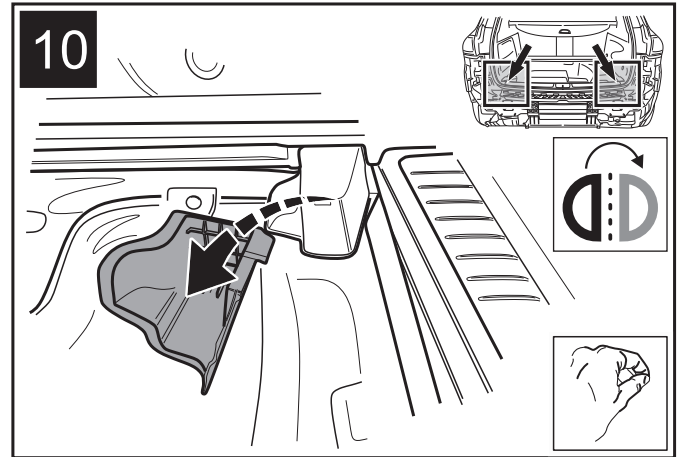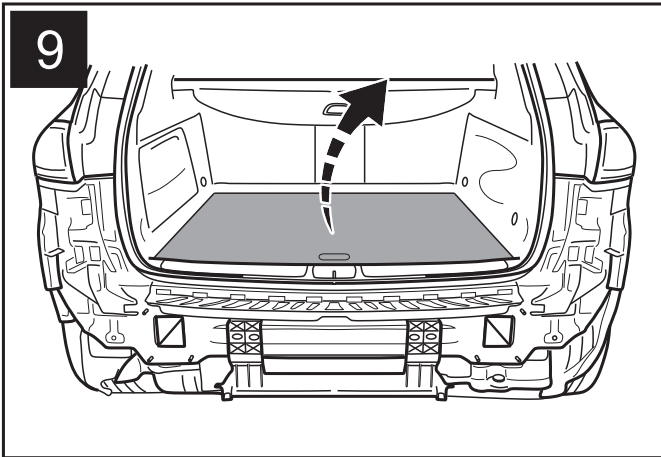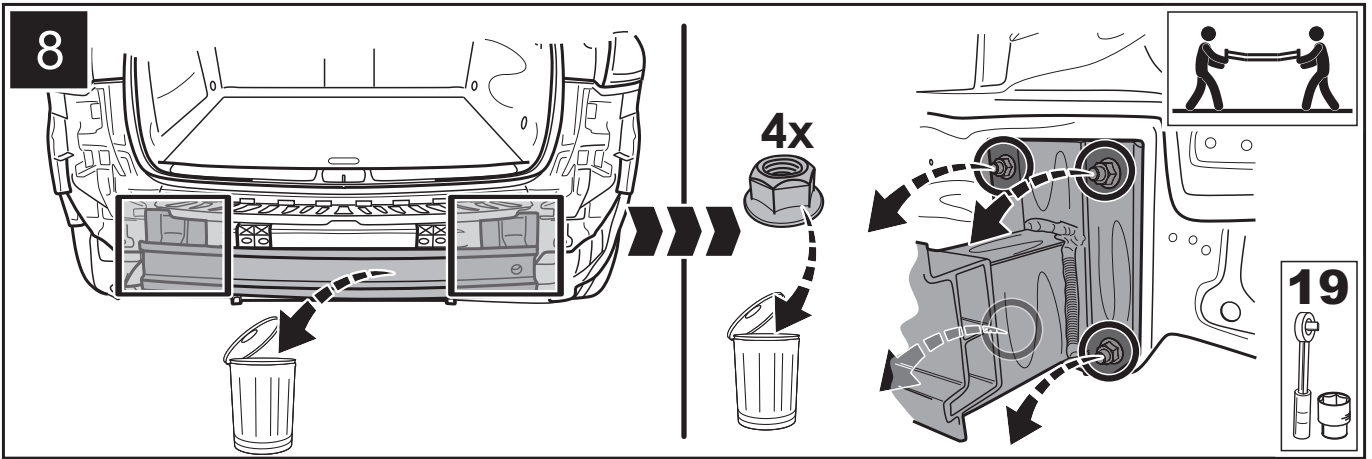

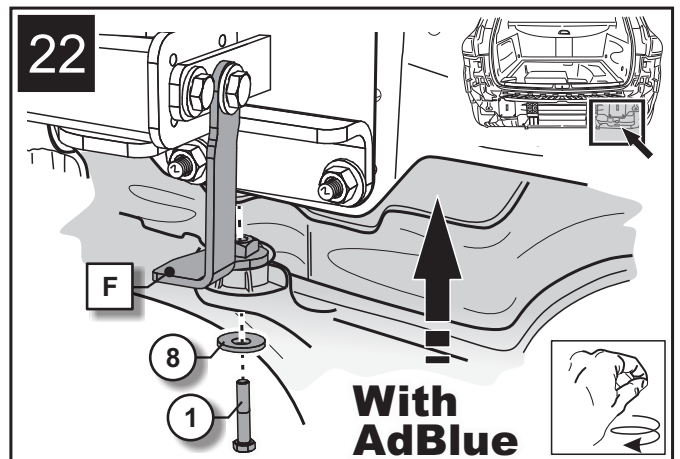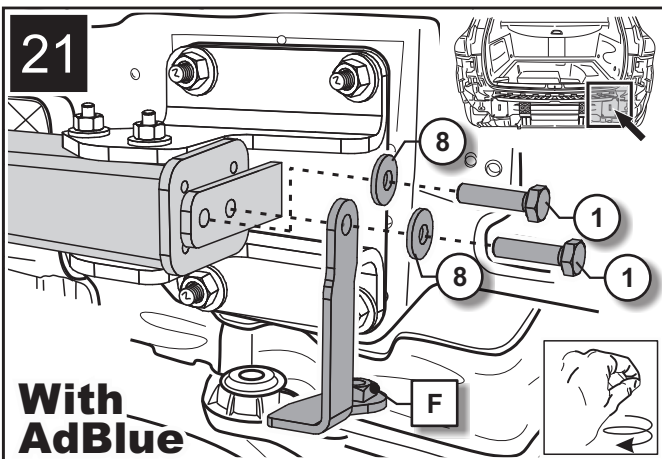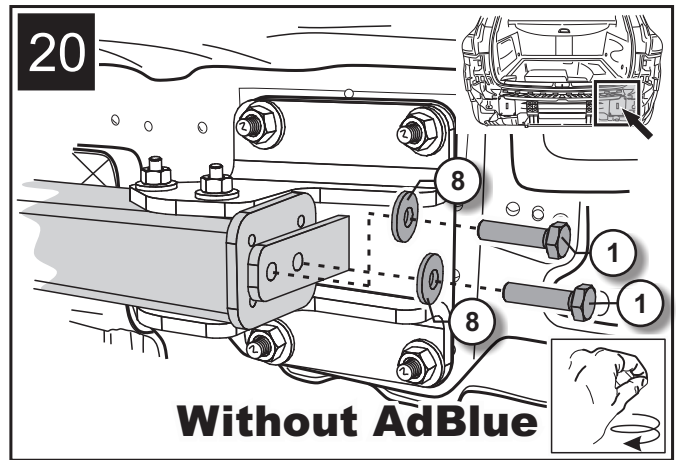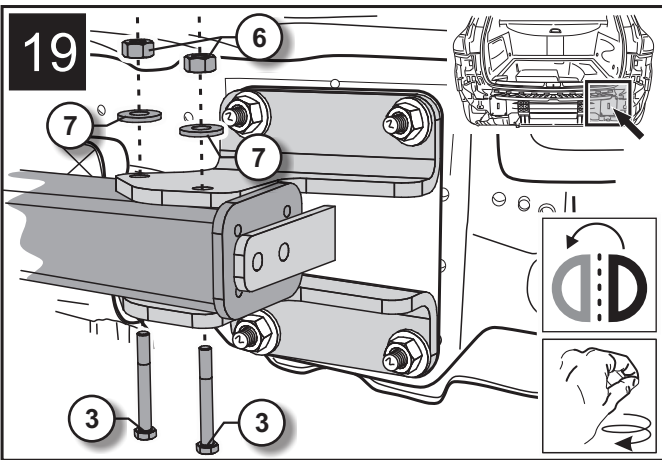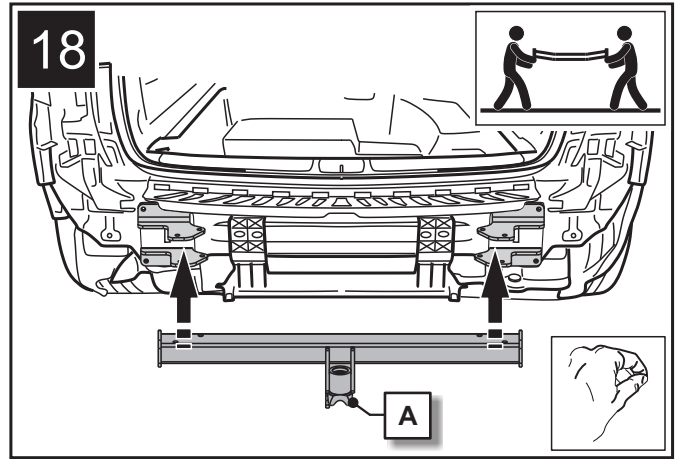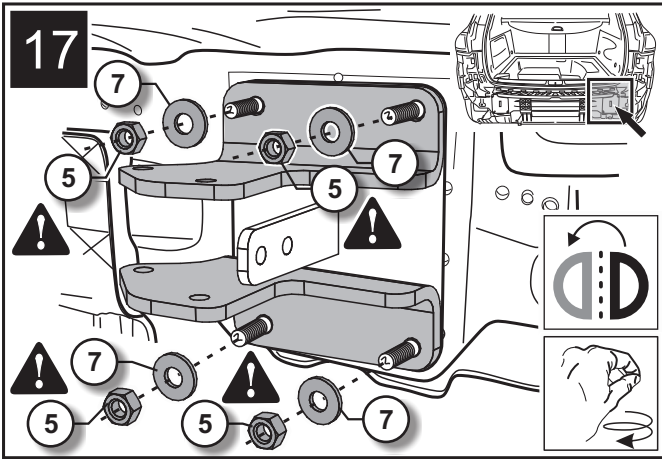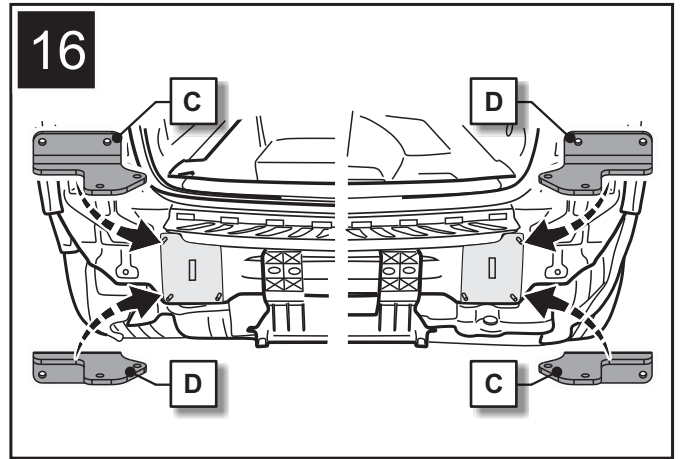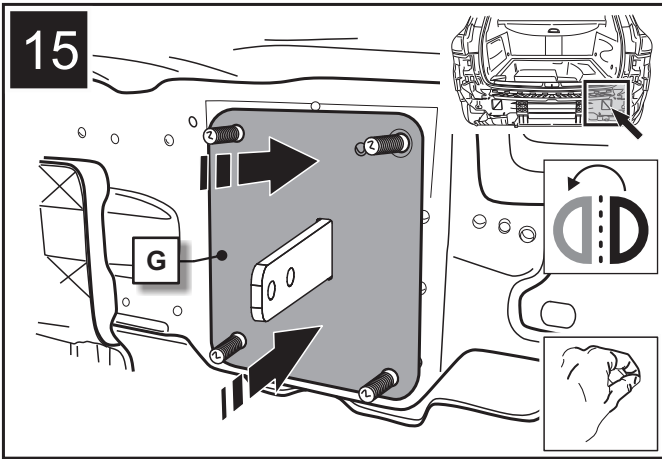

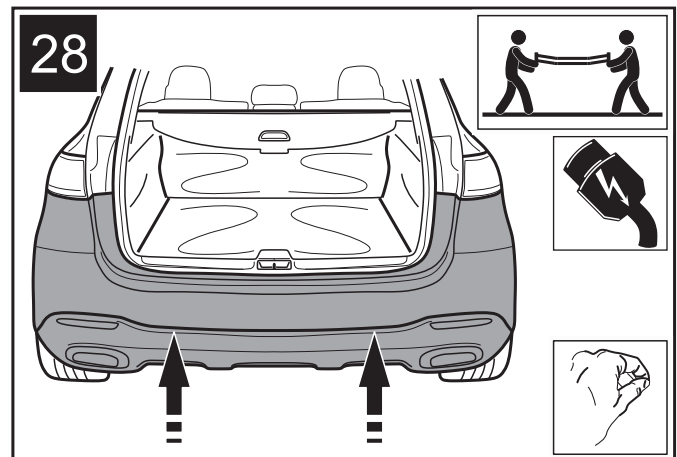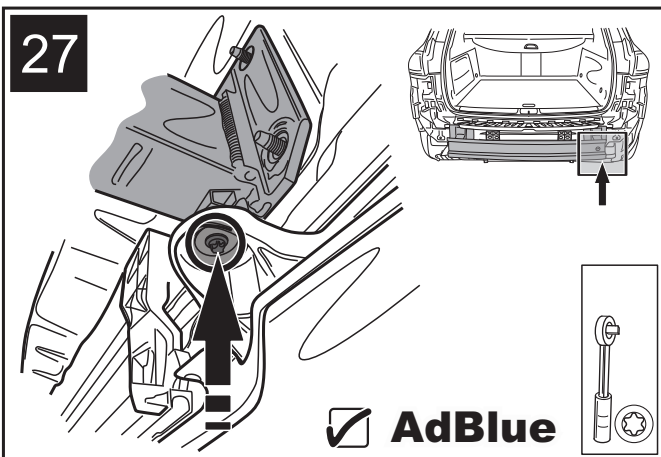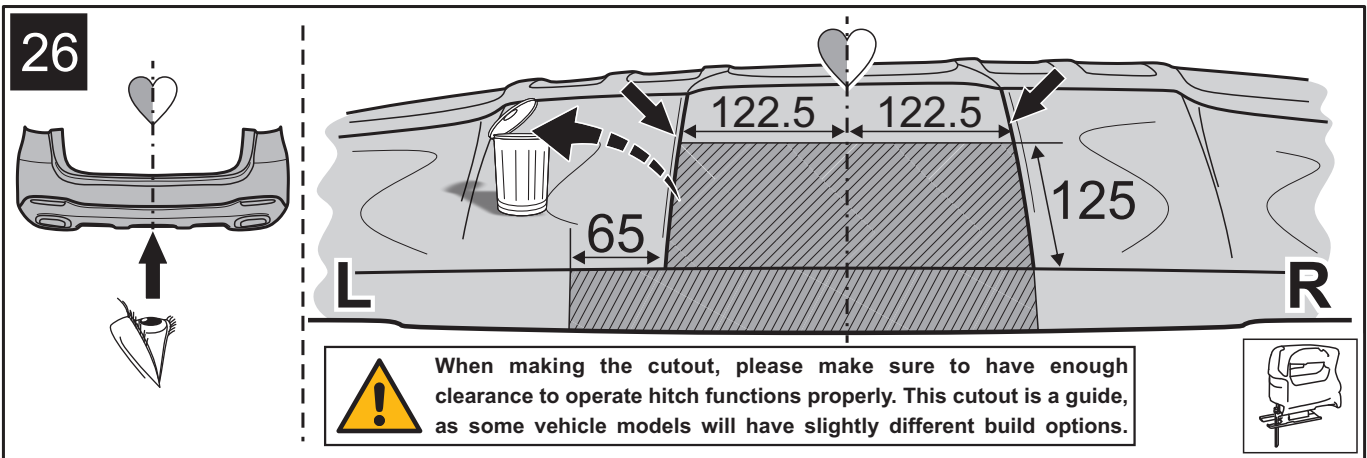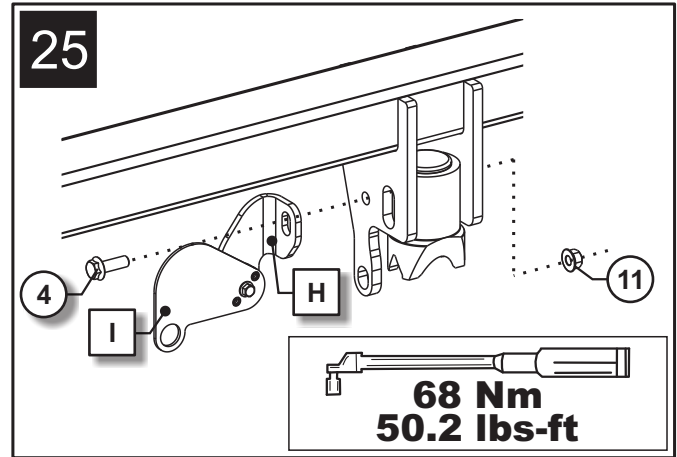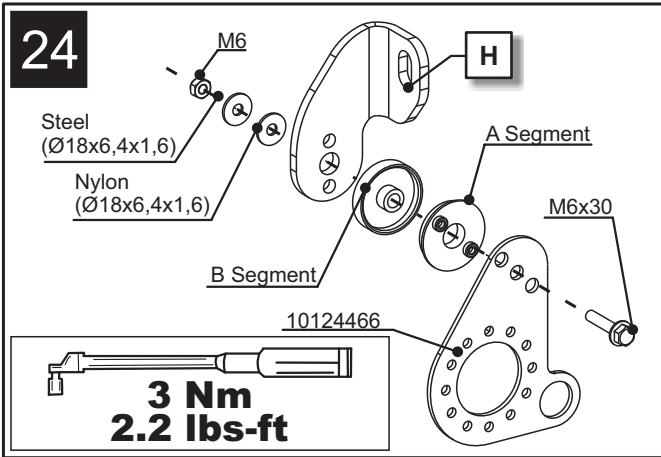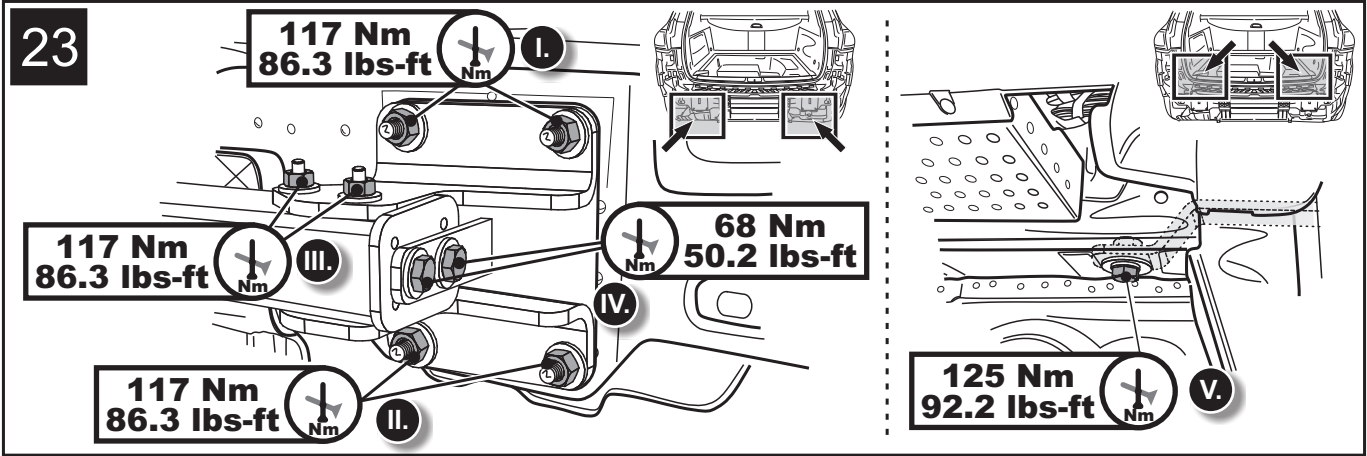

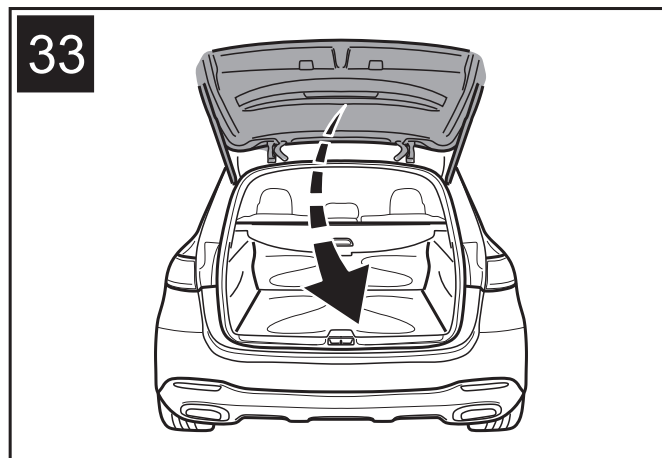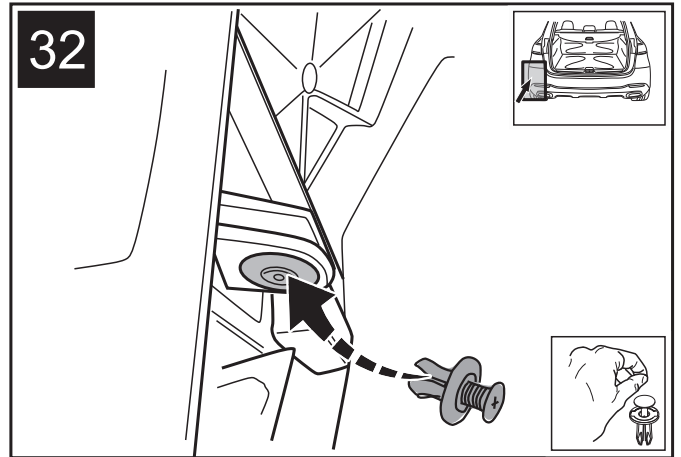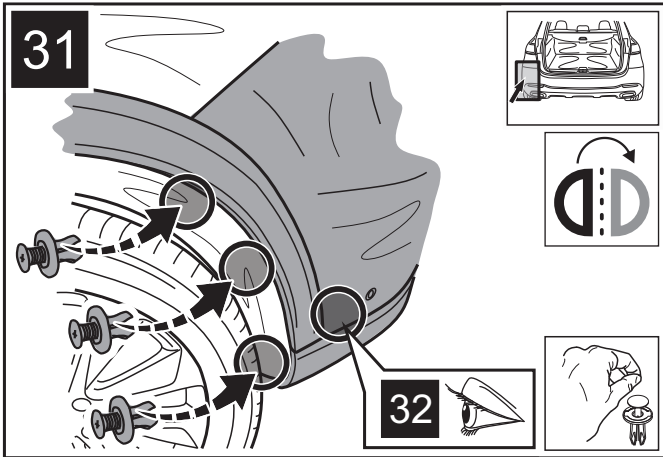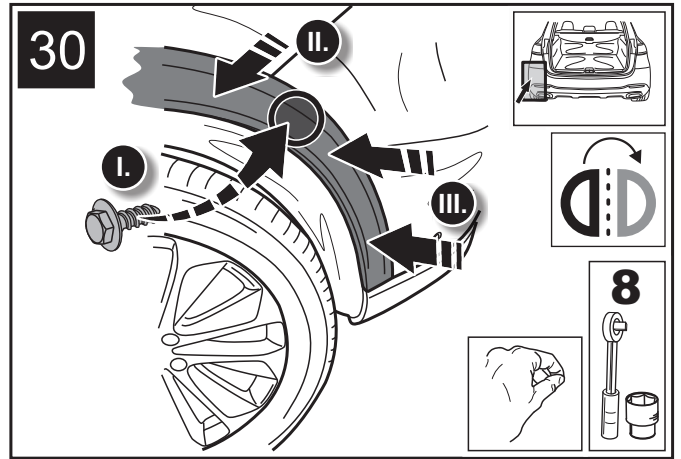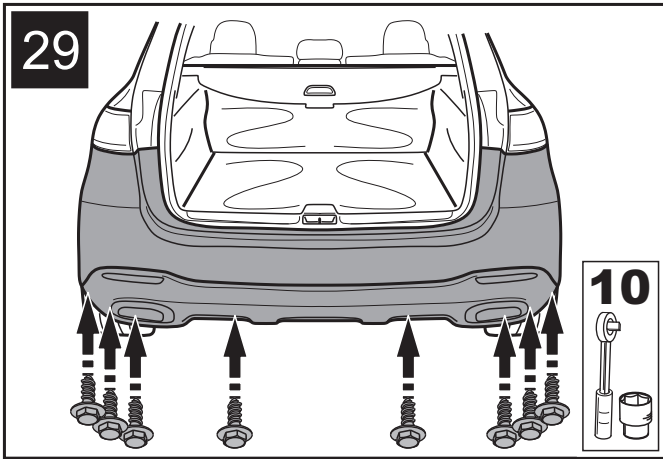

ORIS
ACPS

HELPLINE



www.oris-automotive.com/en/acps-automotive-aftermarket-worldwide

ORIS
ACPS